

ALIENONE

AIR PURIFIER
MODEL: AP-M2-D



USER MANUAL

Please read this user manual before using the device


GETTING TO KNOW YOUR AIR PURIFIER:

Package Contents:

Main Unit *1 Power Adaptor *1
User Manual *1 HEPA Filter *1(Inside)

Getting Started:

1. Unpack the air purifier from the box, remove the plastic bag that covered on the main unit.
2. Plug in the connector to the power port at the bottom of the air purifier, make sure the connection is secure and put the power adaptor to the socket.

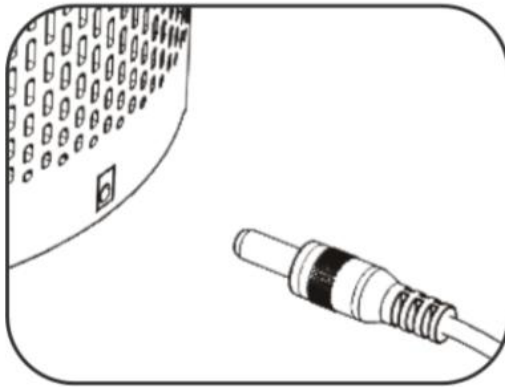

Upside down the air purifier, hold and rotate the filter cover anticlockwise to the "ON" sign, open and remove the plastic bag of the filter before use. Reload the HEPA filter and secure the filter cover.

STRUCTURE



1. Pre-Filter

Helps to neutralize large particles such as lint, fibers, hair and pet fur.

2. True HEPA-13 Filter

Traps 99.97% of fine particles such as PM2.5, bacteria, viruses, smoke, dust & pollen, and other allergens small as 0.3 microns.

3. Nano-Photocatalytic Layer

Defectively eliminate bacteria and viruses. Then decompose them into harmless substance, and the sterilization rate is as high as 99.99%.

CONTROLS

- Any service other than regular cleaning or filter replacement should be performed by qualified electrician. Failure to comply could result in a voided warranty.
- This air purifier must only be connected to the power adaptor along with the package with your country or region standard outlet.
- If not in the room for a long time, please turn off the air purifier for energy saving and prolong the HEPA Filter's life time.
- Avoid touching any moving parts within the air purifier. Never insert fingers or any other objects through the fan guard.
- For maximum performance and safety, the minimum distance from a wall or objects should be 20cm, to keep the air inlet clear.
- Do not place any object on top of the touch panel, in case of unintended activation.

Operation Interface:



FUNCTIONS



ON/OFF:

Press the **ON/OFF** button, the indicate light will turn from slightly bright to bright. At the same time the other button starts to slightly bright.



Fan Speed:

Press the **Fan** button, the button will turn bright, with default Mid Wind. Switch the fan speed (High, Mid, Low, Sleep) by re-touch the button. At High, Mid, Low fan speed, the ambient light is on. Light off at sleep mode fan speed.



Timer:

Press the **Timer** button, the light will turn to bright; you can select 2h, 4h, 6h, 8h countdown and always-on mode. Once you finish the selection, the countdown time indicate light will turn on. Default starting up with always-on mode.



Sterilization:

Press the **Sterilization** button, the indicate light will turn bright. The LED Sterilization Lamp will start to operate. Press again to close it.



Filter Replacement Reminder:


Press the "Filter Reset" button for 3 seconds to reset the filter timer after changing a new filter.

This Product Complies with The Maximum Allowable Concentration of Ozone of 0.050 Parts Per Million by Volume (PPMV) in a 24h Period.


HOW TO REPLACE FILTER

The HEPA filter life time is approximately 6-12 months (1500 hours), when the indicate light of 5 touch buttons start to blink while you turn on the air purifier. That is the notification of HEPA filter replacement.


- 1、Upside down the purifier, and rotate the filter cover clockwise to the “ON” sign.

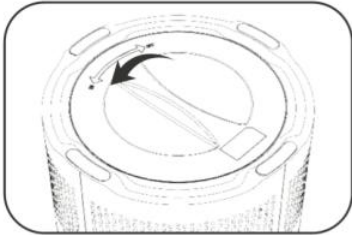


- 3、Take out the old HEPA filter, and replace a new one.

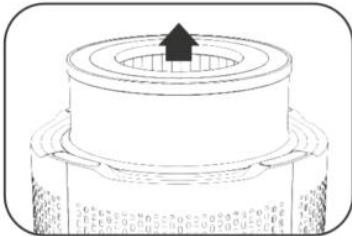

- 2、Pull out the filter cover.

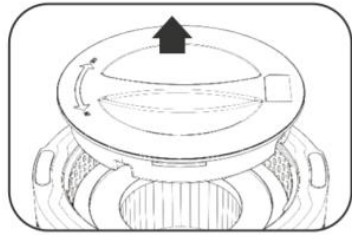

- 4、After put down the filter, recover the filter cap. Clockwise and rotate to the “OFF” sign.

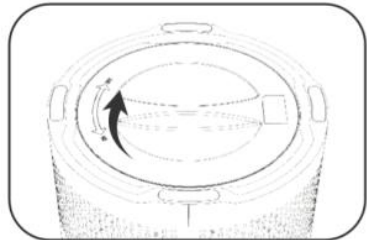

After changed the HEPA filter. Press the ON/OFF button for over 10 seconds while the air purifier is on. The air purifier will automatically start to recalculate the filter life time.

MAINTENANCE

Safety Protection Tips:

- Always shut off the unit and unplug from the socket before cleaning or performing any maintenance.
- Avoid touching any moving parts within the air purifier. Never insert fingers or any other objects through the fan guard.
- Do not clean the unit by spraying it or immersing it in water. Use a damp cloth only. Never allow water or vapors to enter the air purifier unit.
- Do not place any object on top of the touch panel, in case of unintended activation.

DO NOT PUT ANY METAL OBJECTS INTO THE WIND OUTLET.

HEPA Filter & Wind Inlet Maintenance:

- HEPA filter and wind inlet should be cleaned gently by using a vacuum cleaner to suck away dust and debris from the surface of them. More frequent cleaning may be necessary, depending on the air quality.
- Use a damp cloth to wipe the wind inlet.
- **REMEMBER** filters are non-washable, water should not be used on HEPA filters.
- When replacing the filter screen, please disconnect the power supply.

TROUBLE SHOOTING

ISSUE	CHECK
Not Working	1. Check the power adapter is connected and is the correct rating. 2. Make sure the filter cover is sealed. 3. The HEPA Filter must be in place. 4. Ensure the front panel and the air purifier unit are undamaged.
Buttons Blinking	Press the ON/OFF buttons for 10 seconds to reset the Filter Lifetime.
Abnormal Pollutant Smells, Loud noise when running	1. Check if the filter is clean. 2. Replace the filter

SPECIFICATIONS

Product Name	Intelligent Sterilization Air Purifier
Model	AP-M2-D
Rated Power	10W
Power Supply	Input: 100~240V, 50/60Hz Output: DC 12V, 1.2A DC-002, 1.1mm
Fan Size	120*120*25mm, 12V, 420mA
Filter	HEPA-13 Filter, Size $\varnothing$ 140mm*55mm
Product Size	$\varnothing$ 188mm*192mm
Weight	1.2Kg
Noise	32-50dB(A)

Imported by:

ALIENONE LLC

800 SE 4th Ave, Ste 711

Hallandale Beach, FL 3300, USA

e-mail: mail@alienone.com